

[PR-C101, PR-C101M Operation Guide]

Supplemental and Additional Information

Functions

- Added the item to set up for the card thickness in the “Getting the Most out of Your Printer”.

When Using the Thinner Cards than the Standard Cards:

It is available to use the thinner cards than the standard cards if changing the setup for the card thickness.


- Point**
- You can also change the setting by using the printer driver. (→See “Opening the Printer Driver Settings Screen” on page 53.)

1 Switch from Normal Mode to User Mode.

→See “Switching to User Mode” on page 18 for details on how to switch to User Mode.




2 Press the Menu Key until [Printer Setup >>] appears, and then press the EXE Key.

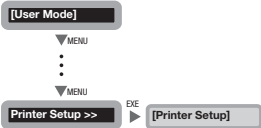

3 Press the Menu Key until [CardThick] appears, and then press the EXE Key.

- Pressing the EXE Key switches between [NORMAL] and [THIN].
- When using the standard cards, set up the [NORMAL].
- When using the thinner cards than the standard cards, set up the [THIN].

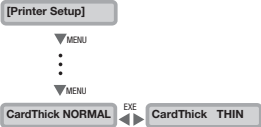

- CAUTION**
- When using the thinner cards, the separated part for the exclusive use needs to be installed to the main body. For the detailed information, please contact to the dealer directly.
 - The standard card refers to the cards with the thickness, 0.76mm (CR-80).
 - [CardThick]Menu: When shipping from factory, the original setting shall be the [NORMAL].
 - For using the Cleaning Card, set up the Card Cassette for using the standard cards, and then use the Cleaning Card.

- Added the item to set up for the card thickness in the [Printer Setup >>] of “User Mode”.

